

FIRE ALARM SETUP TO CANCEL A FALSE FIRE ALARM

1

To cancel the clocks, press the button «avstill/start klokker» once.



2


To cancel the sirens, press the button  «avstill summer» once.

When you have pressed  «avstill summer» once – and once



 «avstill/start klokker» all sound will stop.

3

To reset the fire alarm, press «tilbakestill»  once. If the cause of the alarm is resolved, the fire protection system will return to normal operation.

OBS!



No one should ever turn off the sirens/fire alarm before they are absolutely sure that there is a false alarm or that the cause of the alarm has been cleared / if any fire is out.